snom 300 Settings menu for FW v8.2 and higher

- Press to open. Press again to go to end of menu.
- Press respective number key 1, ABC 2, etc. to open submenus and settings.
- Press ▼/▲ to select setting.
- Press ✓ to save selected setting.

- Press X briefly to return to previous screen
- Press X for 2 seconds to return to the idle. screen

The Maintenance menu

in administrator mode. Settings with On/Off or C/±: Press ✓ to change the Pressing key "2" will switch the phone to user mode! status and save. 5 * 6 (4) * Preferences ■ Call Features Identity Network ■ Maintenance Information Outgoing Time Zone Call Forwarding IP Setting System Info** Status Info Identity Webserver Tone Scheme Forward all Reregister User Mode System Info** 2 Forward when busy Edit Webserver Type Reboot Help Ringer Fwd after timeout Logoff HTTP Admin Reset Values Language Display Outgoing Calls Logoff all Change PIN HTTP Password 6 Check Auto Dial F-Keys Call Voicemail **VLAN** SW -Update 2 Number Time zone: Guessing 3 * ← The Maintenance Maintenance Jump Move to 2 VLAN Priority menu in user mode. beainning of next Call Completion Press key "2" to time zone switch to Admin 4 Hide own System Info** More Show all. mode. Admin Reset VLAN outgoing ID 2 Administrator password required Press ✓ to change 4 Ethernet Mode to return to Admin to: mode! Incoming Calls detection Reduce Show only countries where Reboot Reject anonymous phone language is spoken. Press ✓ Change PIN to show all. Call Waiting 6 Check SW -Update 3 Auto Answer Select time zone Indication with **▼**/**▲**. Press √ to show Ok.

The submenus and the settings shaded black and gray are not available when the phone is running in user mode. The factory setting is administrator mode. The default administrator password is 0000 (4 x zero).

Auto Answer Type

Press ✓ to save.

** System Info: Firmware version, IP address, MAC address, available + total memory